

A	CABLE		DESCRIPTION	N°	N° FIL	PAGE
	TYPE	N°				
B	4G16	3W3	RESISTANCES 33KW	1	3-6	3/2
			2	3-7	3/2	
			3	3-8	3/3	
C	4G16	3W5	RESISTANCES 33KW	4	3-16	3/5
			5	3-17	3/5	
			6	3-18	3/5	
			7	3-24	3/7	
D	4G16	3W8	RESISTANCES 33KW	8	3-25	3/7
			9	3-26	3/7	
			10	4-10	4/5	
E	4G 1,5	4W6	MOTEUR DE L'HELICE DE BRASSAGE #1	11	4-11	4/5
			12	4-12	4/6	
			13	4-13	4/7	
F	4G 1,5	4W8	MOTEUR DE L'HELICE DE BRASSAGE #2	14	4-14	4/8
			15	4-15	4/8	
			16	10-1	10/1	
G	4G 1,5	10W1	ALIMENTATION DU PONT	17	10-2	10/2
			18	10-3	10/2	
			19	10-7	10/4	
H	4G 1,5	10W4	MOTEUR DU VENTILATEUR DU RIDEAU D'AIR GAUCHE	20	10-8	10/4
			21	10-9	10/4	
			22	10-13	10/6	
H	4G 1,5	10W6	MOTEUR DU VENTILATEUR DU RIDEAU D'AIR DROIT	23	10-14	10/6
			24	10-15	10/6	